



HANGING LED SIGN


INSTALLATION AND ASSEMBLY

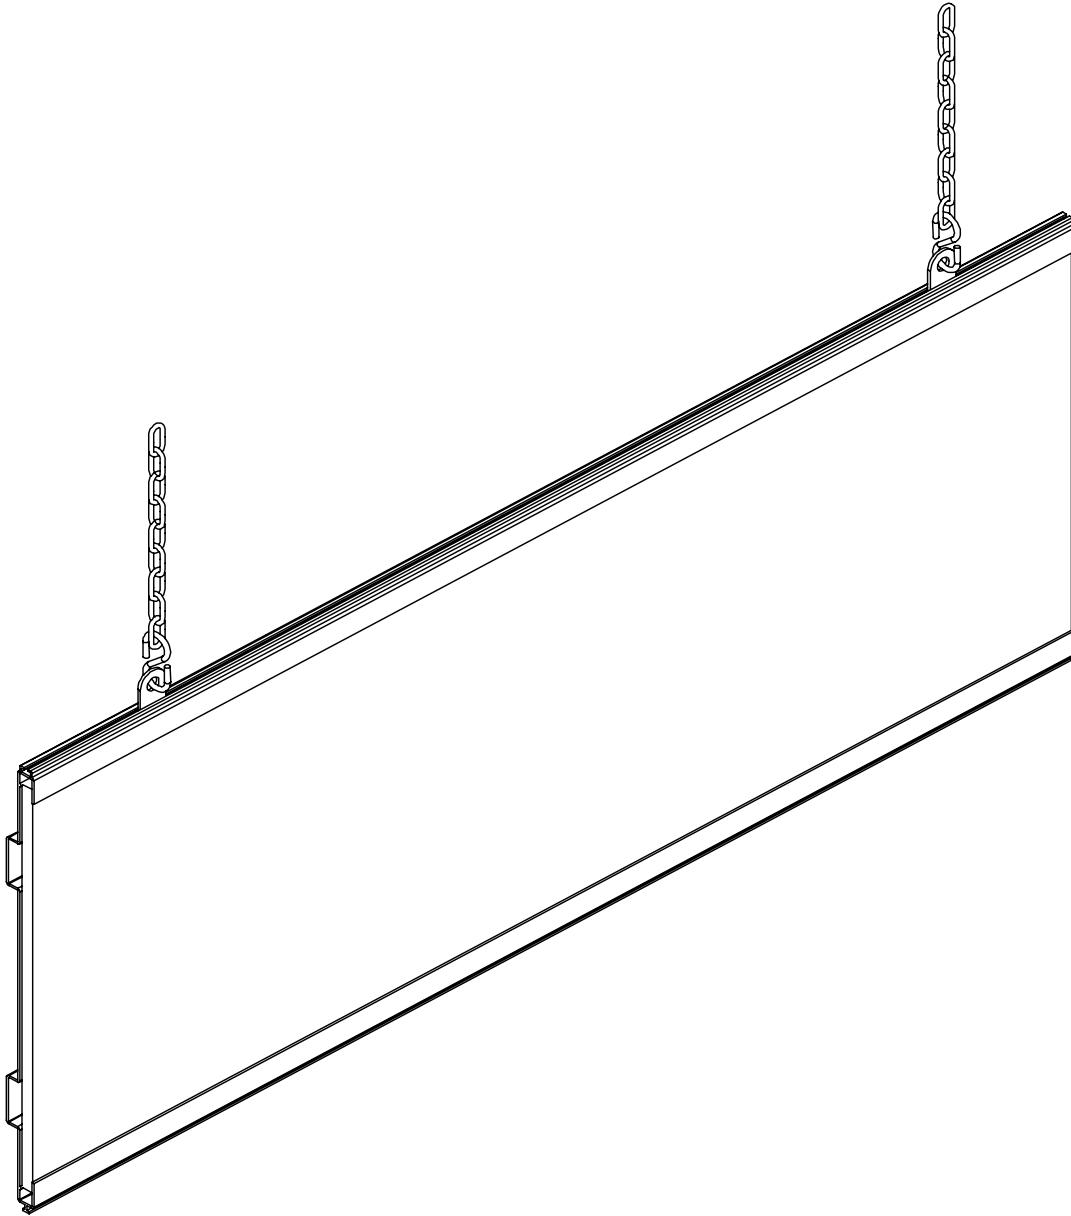


LED Panel x 1

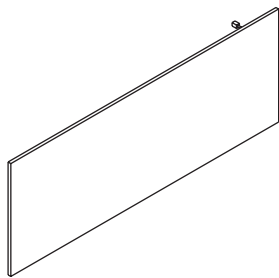


LED Extrusion with tabs x 1

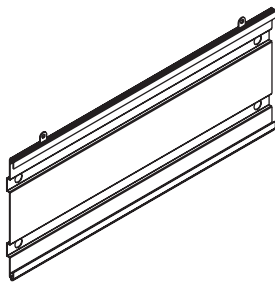


Graphic x 1

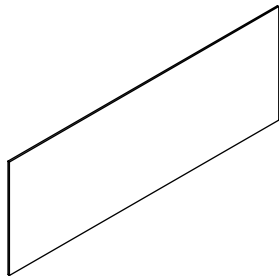


Ceiling Hangers x 2

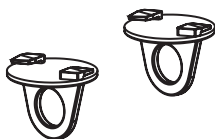


S Hooks x 4

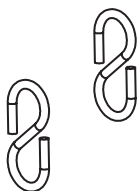


Chain links x 2



Power Supply x 1

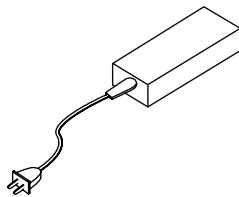


Washers x 2




Wood Screws x 2




Adapter x 1

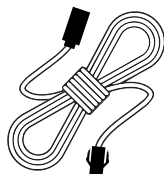


Zip Ties x 2

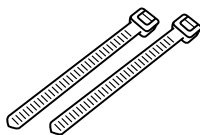


Wall anchors x 2

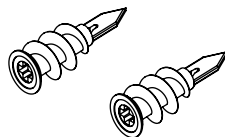


NOTE : If you are hanging on a wall skip this step.

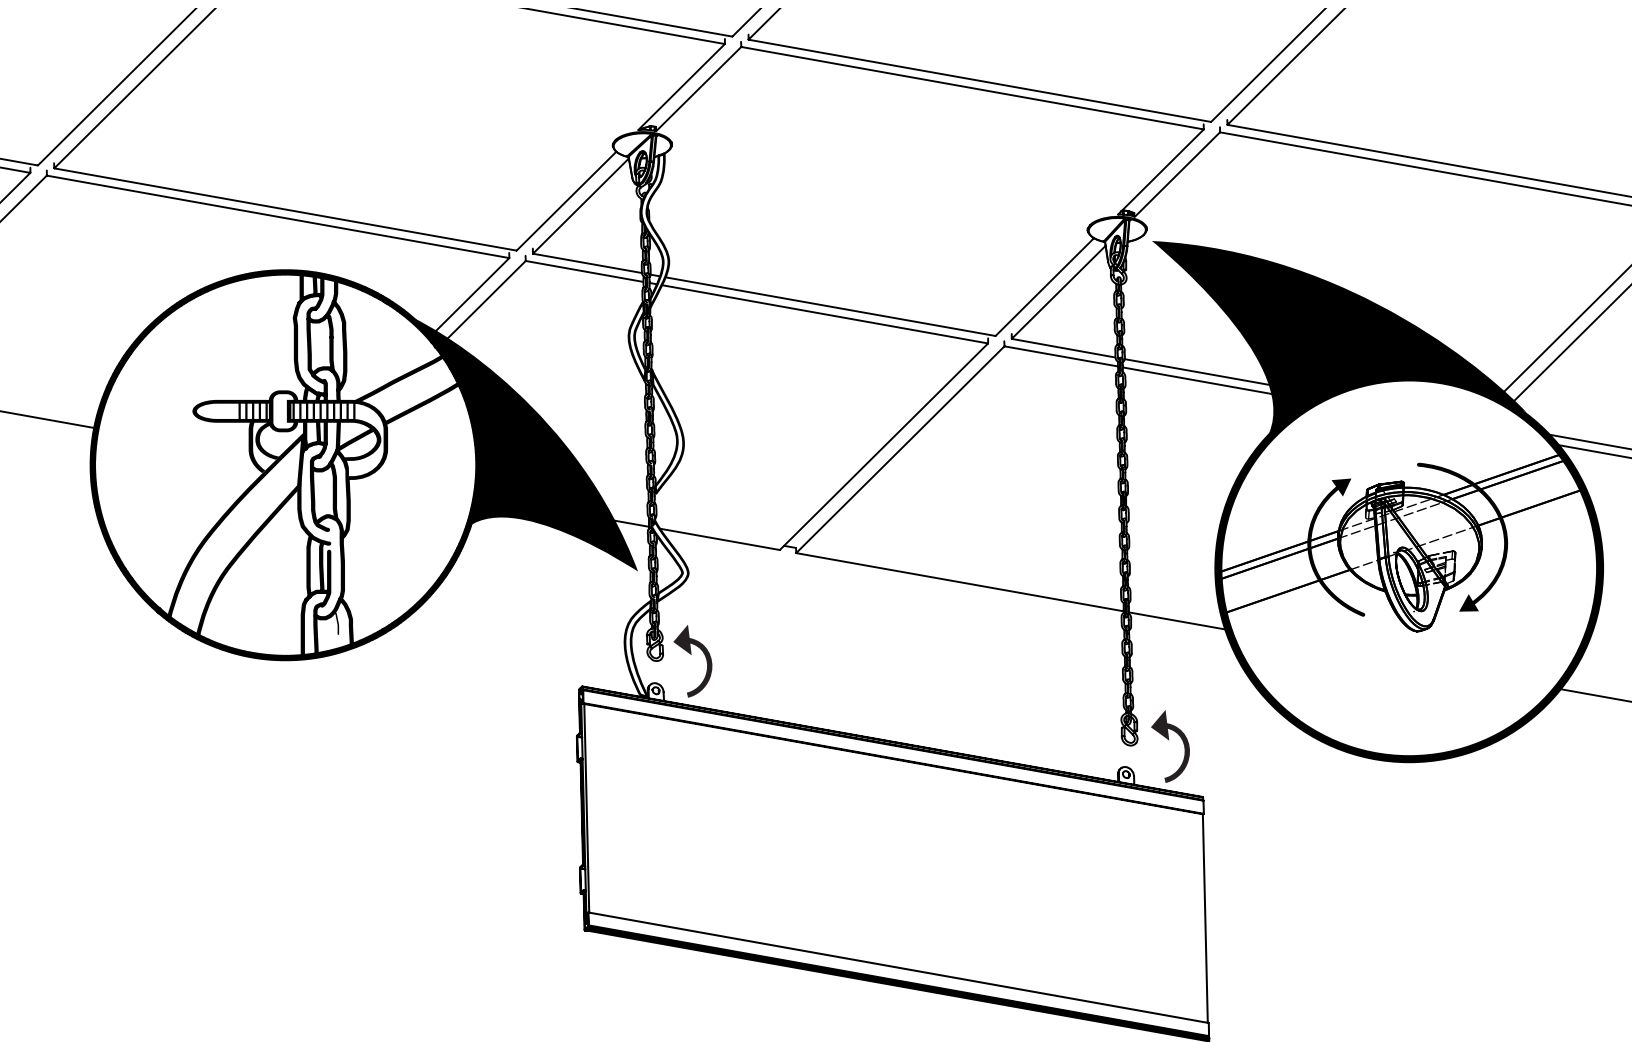

1. Twist “Ceiling Hangers” onto ceiling tiles to secure to ceiling.
2. Attach S Hooks & Chain Links to Ceiling Hangers.
3. Attach LED Extrusion w/Tabs to S Hooks.
4. Adjust tabs to level the sign.
5. Connect the power supply and plug into closest outlet.
6. Add zip ties if necessary to tidy up.

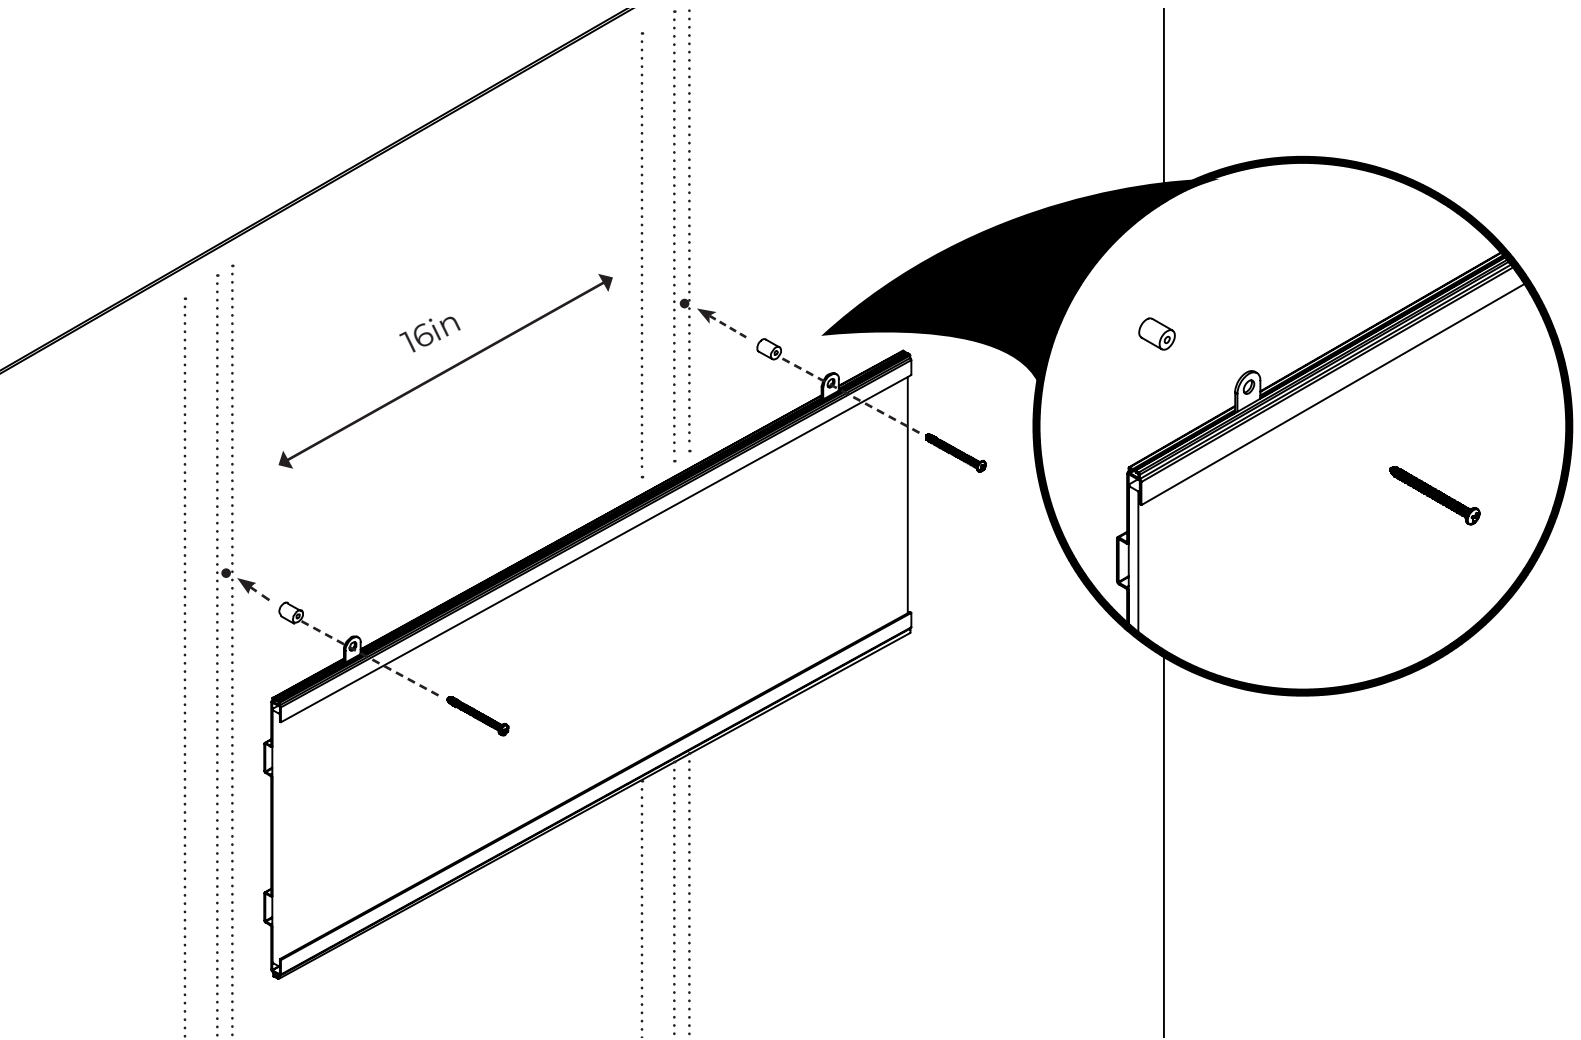

1. Use a stud finder to locate the studs in the wall. Mark the location of the studs with a pencil. Make sure it is level.
2. Line up tabs to align with the markings.
3. Thread the screw through the tab and nylon washer.
4. Drill small pilot holes at the marketed spots.
5. Insert screws into the pilot holes.

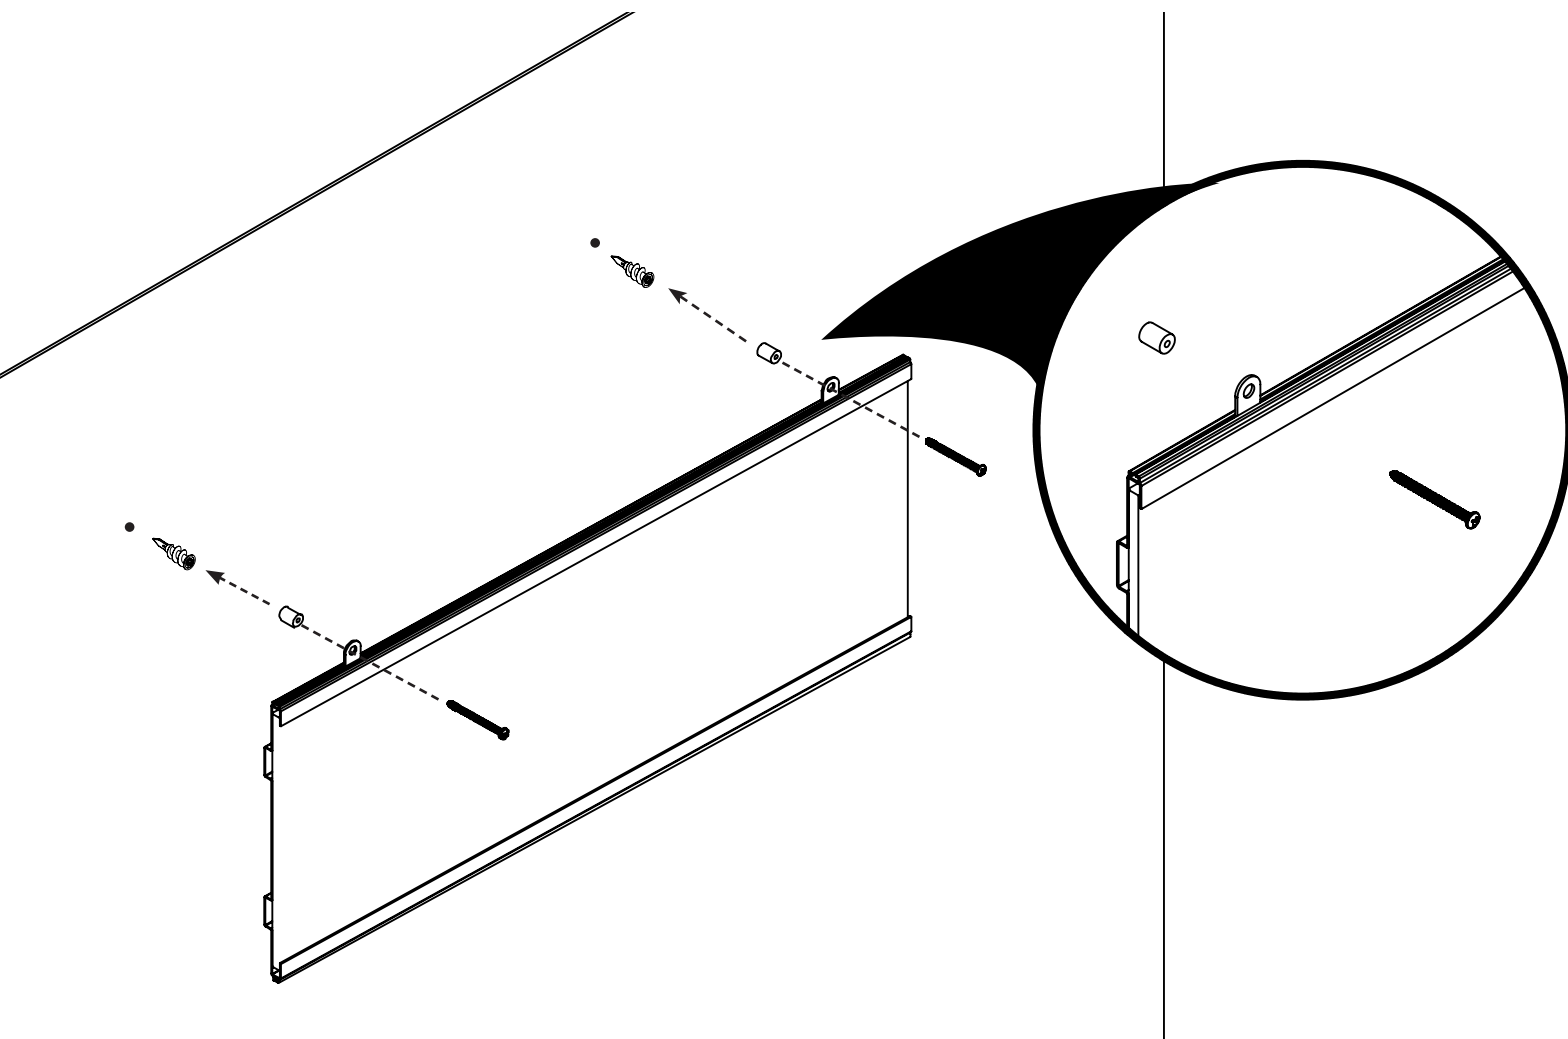

1. Mark desired location with a pencil. Make sure it is level.
2. Drill small pilot holes at the marketed spots.
3. Screw in wall anchors.
4. Line up tabs to align with anchors.
5. Thread the screw through the tab and nylon washer.
6. Insert screws into the wall anchors.